



Joystick

Switch on the electric system using the on/off button on the joystick.

The battery indicator is now shown on the display. Charge the wheelchair when the indicator reaches the red bars.

The three drive modes can be seen at the bottom of the display:
- 1 is manoeuvring
- 2 is indoor
- 3 is outdoor.

Each drive mode has five speed increments. The speed in kms is displayed above the five speed increments (max 6km/h).

Profile switches between drive modes 1 to 3.

Press *Mode* to switch between driving and seat and back adjustment. Use the up-down movement of the joystick to control the tilt-in-space function. Switch between the tilt-in-space and recline function by moving the joystick right or left.

When the back and seat are tilted into an unstable function, speed options are restricted. This is indicated by an orange or red turtle being displayed.

Brakes

The brake of the Cobi Cruise Power is integrated into the motor. This means that when the joystick is disengaged, the wheelchair stops.

Charging

Charge Cruise Power using the included charger. Connect the charger to the wall socket and to the port on the back of the joystick. A full charge can take up to six hours.

When charging the functions of the wheelchair cannot be operated. Make sure to charge Cruise Power when receiving it.

Please notice that Cruise Power is still manoeuvrable despite flat battery.

Daily maintenance

Clean the frame, seat and arm rests using water and a regular cleaning agent.

Seat and joystick can be disinfected using ethanol 70-85% or a chlorine product of min. 1000 ppm and max. 10000 ppm.

Cruise Power is washable in a wash tunnel. Remove all electrical components before wash.



- The joystick contains:
- On/off button
- Horn
- Display showing the battery capacity, time, speed, and drive mode
- Mode og Profile buttons
- Twin button for controlling speed.

Edited 2021-04.

QUICK GUIDE

Cobi Cruise Power bariatric comfort Wheelchair

Guide to transfer, electrical functions, and charging.

From bed to wheelchair

1. Swing footrests to the sides.
2. Adjust the seat angle to the height of the user.
3. User sits down in the wheelchair.
4. Adjust the hip angle via the controller.
5. Swing back the footrests.

From bed to wheelchair - dependent user.

1. Swing footrests to the sides.
2. Adjust the seat angle to the height of the user.
3. Adjust the hip angle via the controller.
4. Tilt the wheelchair backwards.
5. Slide back one arm rest.
6. Lift user sideways into the chair.
7. Swing back footrests and slide back arm rest.

Adjusting the back modules

Make sure to assess the need of extra filling in the nine back modules when user is placed in the wheelchair.

The back modules are fine-tuned with the help of the FitGo adjusting knobs located on the back plates.

The adjusting knob is activated when pressed. Loosen it by pulling back. This releases the cord pull.

Other possible adjustments

The handlebar is adjustable, using a click system.

Leg rests are adjustable in both height and position. They also have a swing away function.

The angle of the foot plate, the angle of the leg rest and the angle of the calf plate can be adjusted without tools.



Scan the code and find more information about the product on the website.