

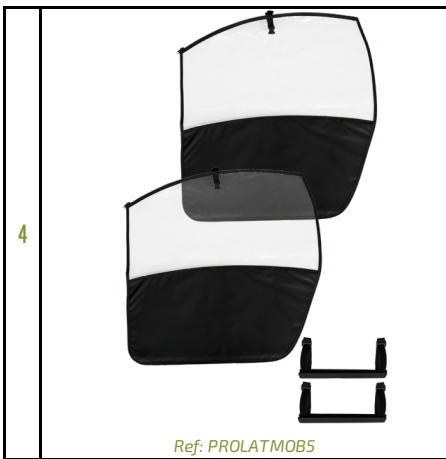
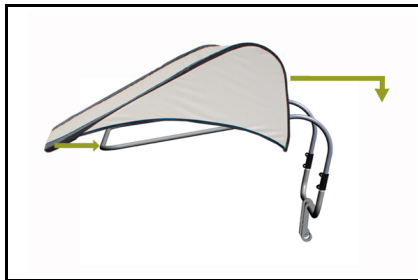
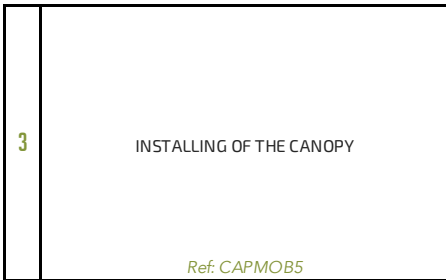


# MODULO SUN 2

## INSTRUCTIONS OF INSTALLING SQUARE TUBE FIXATION UNDER THE SEAT

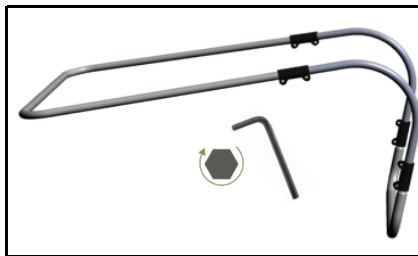

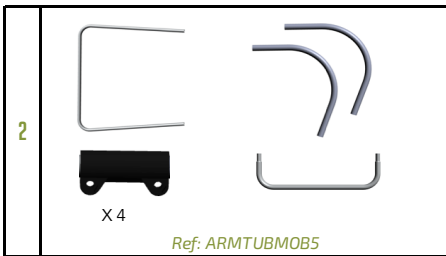

 **Recare**  
Rehabilitation and healthcare  
equipment specialists  
01993-880200  
info@recare.co.uk  
www.recare.co.uk

**CE**  
Ref: VELMOB5SUN-CD  
N° NOTMOB5SUN-CD

